ATD-7024
11 PC. DISC BRAKE CALIPER KIT
OPERATING INSTRUCTIONS

1) Jack up the car and support on axle stands, then remove the relevant road wheel

2) Remove the caliper from its carrier and take out the brake pads

3) Fit the main body of the wind back tool into the caliper; turn the main thrust bolt clockwise to compensate for the distance between the piston and the caliper body.

4) Select the correct adapter and fit it into the end of the main thrust bolt. Continue rotating the thrust bolt clockwise until the pegs of the adapter are centered and correctly located into the mating recesses in the piston.

5) Turn the thrust bolt to wind the caliper piston back into the housing.

6) Fit the new brake pads and bolt the caliper back on to the carrier.

ADVANCED TOOL DESIGN

ATD-7024

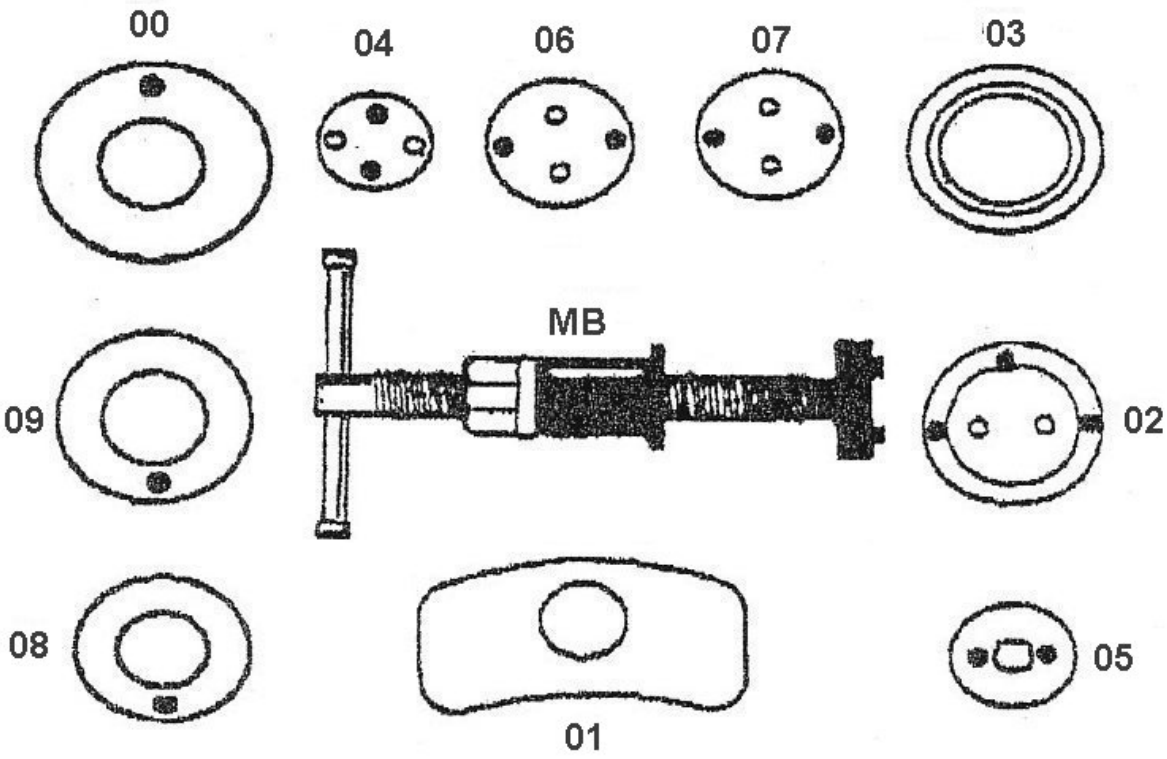

ORDERING PART#	ITEM#	PART DESCRIPTION
PRT7024-00	00	ADAPTER - G.M.
PRT7024-01	01	SEPARATING DISK
PRT7024-02	02	ADAPTER/CITROEN XM,XANTIA U.A
PRT7024-03	03	ADAPTER/BMW,HONDA, JAGUAR
PRT7024-04	04	ADAPTER/FORD/MAZDA/SUBARU
PRT7024-05	05	ADAPTER-MET TO 3/8" S/D
PRT7024-06	06	ADAPTER-NISSAN PRINERA
PRT7024-07	07	ADAPTER-FORD SIRA,HONDA PRELUDE +
PRT7024-08	08	ADAPTER--GENERAL MOTORS
PRT7024-09	09	ADAPTER--GENERAL MOTORS
PRT7024-MB	MB	MAIN BODY